

A new version for the KeyWatcher system you have purchased has been developed. This version is intended to accommodate a new panel design. The following items detail the changes to the operation of this version. Please keep this information with your KeyWatcher User manual for reference.

When a KeyWatcher I is shipped it will contain 1 of 3 panel sizes. These panels will be able to have up to 20, 40, or 60 locations. Upon powering up the system, the user will need to determine what size panel they have and also how many rows of locations the panel contains. This will insure proper operation of the system. The following describes all possible selections.

Power-Up Procedure:

- 1) The following will be displayed during the power of the KeyWatcher.

Panel Size (MAX) 1:60 2:40 3:20

- 2) This item determines how many locations a panel may contain (NOT THE NUMBER OF LOCATIONS IN THE PANEL). This can be determined by counting how many locations may be installed in the panel.

If the location panel will allow up to 60 locations, select 1 and press **ENT**.

If the location panel will allow up to 40 locations, select 2 and press **ENT**.

If the location panel will allow up to 20 locations, select 3 and press **ENT**.

The display will then prompt the user to confirm their selection. If an incorrect selection was made, place the cursor under the 'N' and press **ENT**. The display will return to step 1.

If the correct selection was made, place the cursor under the 'Y' and press **ENT**. The following will be displayed:

NUMBER OF ROWS 1 2 3 4 5 6

- 3) This item allows the KeyWatcher to determine the number of locations used in the panel. Select the number (1-6) that corresponds to how many rows are in the panel.

The display will then prompt the user to confirm their selection. If an incorrect selection was made, place the cursor under the 'N' and press **ENT**. The display will return to step 2.

If the correct selection was made, place the cursor under the 'Y' and press **ENT**.

The KeyWatcher's display should now be flashing between the time & date and the company name. You may now refer to your KeyWatcher User Manual and program the KeyWatcher to your specifications.