

# The KeyWatcher "SmartKey Vise" 6-in-1 Tool by Genesis Resource, Inc.

## INSTRUCTION GUIDE

|  |  |
|--|--|
|    | <p>1) <b>Seal SmartKey U-Ring:</b> Locate the SmartKey in the top chamber towards the rear of the vise. Place new u-ring in line with the holes in the top of the fob, making sure that the notched end of the u-ring is inserted in the hole on the same side as the notch side of the fob. Bring the lever handle downwards to push the u-ring into the fob.</p>   |
|    | <p>2) <b>Secure SmartKey:</b> Place your SmartKey with the notch and the tapered side facing upwards in the slot at the rear of the vise and in line with the lever handle so that it makes contact with the notch. (U-ring can be on right or left side.) Apply pressure on lever handle to firmly hold your SmartKey from moving. Using a small hacksaw or Dremel, cut the top side of the stainless steel u-ring, flush with the edge of the SmartKey. After cutting the u-ring through, remove the u-ring by pulling it out of SmartKey and discard it.</p>  |
|   | <p>3) <b>SmartKey U-Ring Fragment Press:</b> After cutting the u-ring from the SmartKey you will need to remove the fragment of u-ring left inside the fob before you can insert a new u-ring. To do this, place the SmartKey at the front of the vise with the notch and tapered side 'facing in' to align with the u-ring pin removal tool (as pictured). Slowly raise the vise lever upwards to force the u-ring fragment down into the SmartKey chamber to make way for a new u-ring.</p>  |
|  | <p>4) <b>Key Ring Hub Splitter:</b> The SmartKey Vise is the perfect tool for safely and efficiently cutting and removing the colored hubs from the Morse tamperproof key rings. Simply raise the lever handle to enable the hub to be located under the cutter at the front of the vise, press the vise handle down firmly to cut the hub in two, lift the handle remove the ring and pieces of hub.</p>  |
|  | <p>5) <b>Ring Spreader:</b> Make sure hub is completely removed with hub cutter. Slide tamperproof ring over handle with opening facing as shown in picture. Then hook lower end into the eyelet that protrudes up from the vise base. Place one hand on back bottom plate of vise using the other hand to pull up on handle spreading ring opening as needed.</p>   |
|  | <p>6) <b>Seal Hub:</b> Attach a hub to one side of tamperproof key ring by pushing it on by hand. Attach your keys and your SmartKey to the tamperproof ring. Place the tamperproof key ring with the hub at the bottom in the appropriate groove on top of vise (small rings towards the front and larger rings to the rear) and align with corresponding groove in underside of handle. Press the lever handle down to lock the other side of the ring into the hub, which should be verified by a 'click'. Remove newly sealed ring from vise and rotate hub one full revolution to be sure it is locked.</p> |

Vise is designed with 4 mounting holes to optionally secure to bench top or other surface.

**Demonstration Video:** [www.YouTube.com/KeyWatcherKen](http://www.YouTube.com/KeyWatcherKen)

701 East Barbarita Avenue, Gilbert, AZ 85234-4666

Voice: 800-248-6420 or 00+1+480-497-2500 ♦ Fax: 480-497-5585

Email: [sales@genesisresource.com](mailto:sales@genesisresource.com) ♦ Website: [www.genesisresource.com](http://www.genesisresource.com)